



Installation Instructions

ACMGWM10-40 Window Mount Bracket



The following instructions should be used to install the Concierge Displays ACMGWM10-40 window mount bracket.


Preparation and Notes

Ensure that there is sufficient access to the top part of the window frame where the bracket is to be mounted.

There will be the need to feed down DC power cable and or UTP cable.


Tools required

- Isopropyl wipe
- Fine tip permanent marker
- Utility knife
- Battery powered drill/driver
- 22mm hole saw suitable for aluminium drilling
- Philips drive bit
- Philips hand held screw driver

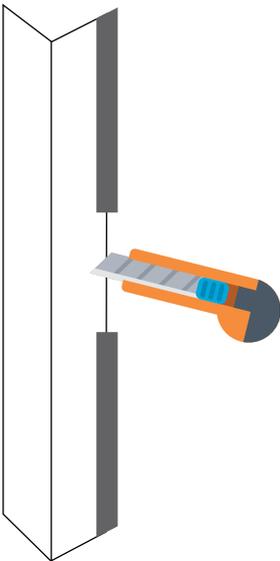

Step 1

Determine the height that the bracket is to be mounted. Place the bracket in the desired location and with a marker, mark the window sealant where the bracket comes in contact. Using a utility knife cut out all of the silicone that you have marked.

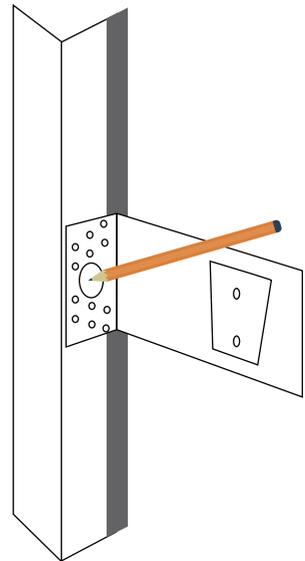


Step 2

Place the bracket back in the desired location and with a marker trace around the mount's 22mm hole.

Step 3

Using a battery drill with a 22mm hole saw, drill out the circle that you have drawn on the aluminium frame and drill a further hole in the ceiling space directly above the channel that has already been drilled.

This will allow the DC power and or LAN cable to pass down the channel and feed out through the 22mm hole you have drilled at the window mount location. Insert the cable protecting 22mm Split Nylon Bushes provided into the ceiling space hole that has been drilled.

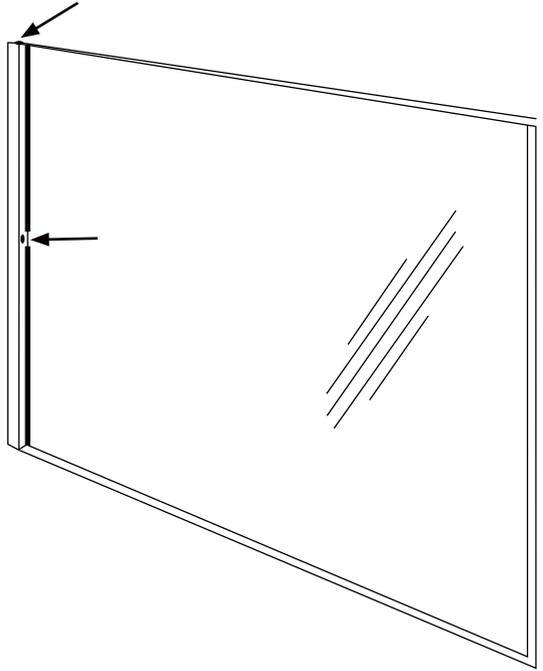


Step 4

Using an Isopropyl wipe, clean the window where the bracket is to be mounted.

Peel off the adhesive tapes protective film and carefully place the window mount in the desired location ensuring the already drilled 22mm hole lines up with 22mm hole in the bracket.

The adhesive film should now be holding up the bracket itself.

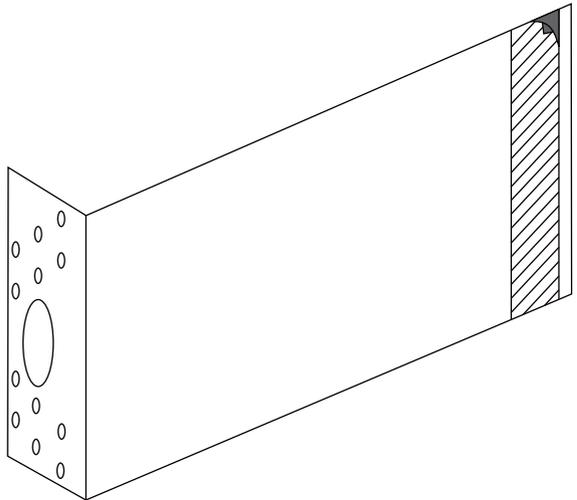


Step 5

Using a battery screwdriver use a minimum of 2 self drilling screws provided screwing through 2 of the 12 x 4mm holes provided in the bracket.

Step 6


Remove the VESA side of the panel adaptor bracket by removing the 2 x M5 phillips screws from the bottom and sliding it up. Attach the VESA adaptor to the back of the IAdea Smart Signboard using the 4 x M4 socket screws and M4 washers provided. Ensure that the panel is in the correct orientation.

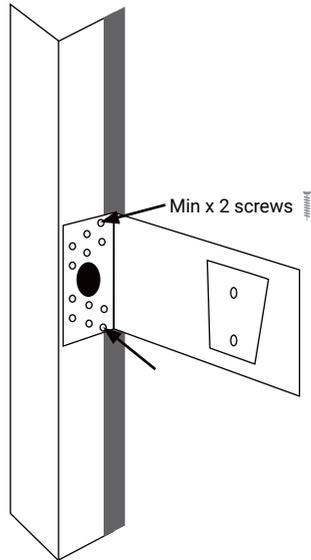

Step 7

Feed the required cables from the ceiling space down through the aluminium channel and out through the 22mm hole in the bracket. Insert the cable protecting 22mm Split Nylon Cable Bush into the bracket's 22mm hole.

The window mount is now ready for the Concierge Room Booking Display to be mounted. Slide on the display, connect the required cables and screw on the 2 x M5 screws provided with a hand held screw driver. The screw points are located at the base of the bracket.

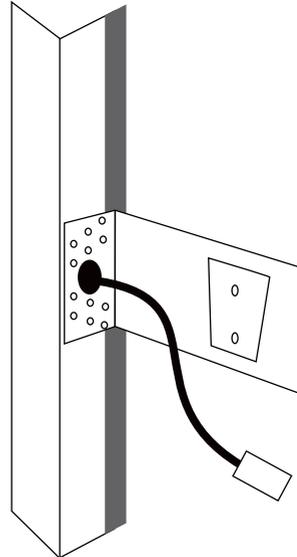

**** To switch between mounting to the LEFT or RIGHT of a window frame. Remove the VESA mount, then remove the 2 x M6 nuts and flip adaptor plate to suit.**